

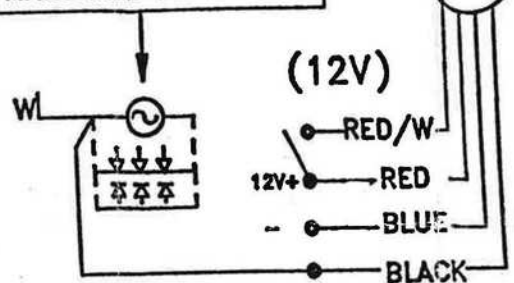


CONNECT ON DYNAMO:
 BOSCH-----W
 DELCO RGMV-----R
 MARSHALL FR.-Middlet

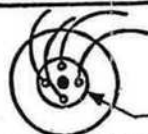

ITAC-4000

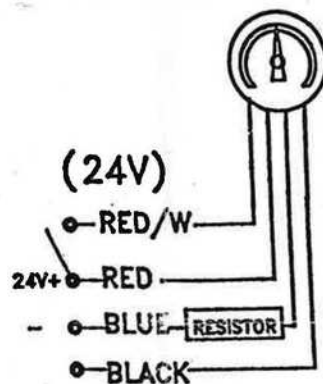

THE GAUGE MAY BE ADJUSTED WHILE THE ENGINE IS RUNNING IDLE.(400r.p.m.) OR USE A MANUAL METER. USE THE PLASTIC-SCREWDRIVER TO PUSH THROUGH THE MIDDLE HOLE.

NB:THE TACHOMETER IS ADJUSTED FOR RATIO 1:1 BETWEEN PUMP-WHEEL AND DYNAMO SO IF RATIO IS 1:1 YOU SHALL NOT MAKE ANY ADJUSTMENT.